

COMPACT AUTO SMART CHARGER (2A, 6/12V)

MODEL NO: AUTOCHARGE200HF

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to



Wear eve protection



Wear protective gloves



Electrical shock hazard



 
Warning corrosive substance



Warning:



Use in well Keep away risk of explosion from sources of ventilated areas ignition



instructions

Keep in dry area protect from rain

1. SAFETY

1.1. **ELECTRICAL SAFETY.**

WARNING! It is the user's responsibility to check the following:

Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.

If the charger is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse see fuse rating in these instructions.
- **DO NOT** pull or carry the appliance by the power cable.
- DO NOT pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
- DO NOT use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

This product is fitted with a BS1363/A 13 Amp 3 pin plug.

- If the cable or plug is damaged during use, switch the electricity supply off and remove from use.
- Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a gualified electrician. Class II products are wired with live (brown) and neutral (blue) only and are marked with The Class II symbol;
 - A) Connect the BROWN live wire to the live terminal 'L'.
 - B) Connect the BLUE neutral wire to the neutral terminal 'N'.
 - C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.
- Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
- **DO NOT** connect either wire to the earth terminal.

Sealey recommend that repairs are carried out by a qualified electrician.

1.2. **BATTERY CHARGER SAFETY.**

DANGER! BE AWARE, LEAD-ACID BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS VERY IMPORTANT TO READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY, EACH TIME YOU USE THE CHARGING EQUIPMENT.

Follow these instructions and those published by the battery and vehicle manufacturers, and the maker of any equipment you intend to use in the vicinity of the battery. Remember to review warning marks on all products and on engines.


WARNING! Modern vehicles contain extensive electronic systems.

You are required to check with the vehicle Manufacturer, for any specific instructions regarding the use of this type of equipment on

No liability will be accepted for damage / injury, where this product is not used in accordance with all instructions.

PERSONAL PRECAUTIONS. 1.3.

- Ensure there is another person within hearing range of your voice and close enough to come to your aid, should a problem arise when working near a lead-acid battery.
- Wear safety eye protection and protective clothing. Avoid touching eyes while working near battery.
- Have fresh water and soap nearby in case battery acid contacts skin, clothing or eyes.
- Wash immediately with soap and water if battery acid contacts skin or clothing. If acid enters eye, flush eye immediately with cool, clean running water for at least 15 minutes and seek immediate medical attention.

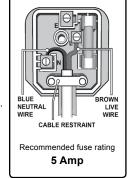

- Remove personal metallic items such as rings, bracelets, necklaces and watches. A lead-acid battery can produce a short-circuit current which is high enough to weld a ring or the like to metal, which would cause severe burns.
- ✓ Ensure hands, clothing (especially belts) are clear of fan blades and other moving or hot parts of engine, remove ties and contain long hair.
- **DO NOT** smoke or allow a spark or flame in the vicinity of battery or engine.

1.4. GENERAL SAFETY INSTRUCTIONS.

- ✓ Familiarise yourself with the application and limitations of the charger as well as the potential hazards. Also refer to the vehicle manufacturer's hand book. IF IN ANY DOUBT CONSULT A QUALIFIED ELECTRICIAN.
- ✓ Ensure the charger is in good order and condition before use. If in any doubt **DO NOT** use the unit, contact your Sealey Stockist.
- ✓ Keep tools and other items away from the engine and ensure you can see the battery and working parts of engine clearly.
- Ensure the output of the charger is the same voltage as the battery.
- Ensure that during charging, the charger is placed in a location where there is sufficient ventilation to prevent the build up of explosive gases from a lead acid battery.
- If battery has caps to access the battery fluid, remove the caps and check the fluid level before connecting the power clamps. If necessary top-up the battery with distilled water by referring to the battery manufacturer's instructions. (Apply the personal safety precautions described in part 1.3).
- ✓ If the charger receives a sharp knock or blow the unit must be checked by a qualified service agent before using.
- If the battery terminals are corroded or dirty clean them before attaching the power clamps.
- ✓ Keep children and unauthorised persons away from the working area.
- DO NOT dis-assemble the charger for any reason. The charger must only be checked by qualified service personnel.
- DO NOT try to charge a non-rechargeable battery.
- **DO NOT** try to start engine when charger is connected to battery.
- DO NOT try to charge battery if battery fluid is frozen.
- □ WARNING! To prevent the risk of sparking, short circuit and possible explosion DO NOT drop metal tools in the battery area, or allow them to touch the battery terminals.
- DO NOT allow power clamps to touch each other or to make contact with any metallic part of the vehicle.
- ➤ DO NOT cross connect power leads from charger to battery. Ensure positive (+/RED) is to positive and negative (-/BLACK) is to negative.
- **DO NOT** pull the cables or clamps from the battery terminals.
- **DO NOT** operate within the vicinity of flammable liquids or gases.
- **DO NOT** use charger inside vehicle or inside engine compartment.
- Ensure there is effective ventilation to prevent a build-up of explosive gases.
- **DO NOT** use the charger for a task for which it is not designed.
- □ WARNING! DO NOT simultaneously charge batteries of different capacities or discharge levels.
- □ WARNING! If a fuse blows, ensure it is replaced with an identical fuse type and rating. Use only Sealey genuine parts.
- ✓ When not in use, store the charger carefully in a safe, dry, childproof location.
- ✓ NOTE:This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


2. INTRODUCTION

Dual voltage smart charger (6V / 12V) and maintainer ensures that the battery is kept fully charged and ready to use for extended periods of time. Clear, easy-to-read LED status lights indicate the current charging or 'float' mode. Heavy-duty case with simple controls. Charges conventional lead acid, AGM/GEL and Lithium batteries. Inbuilt reverse polarity protection. One of a range of dual voltage, high frequency, smart chargers/maintainers that can be left connected for extended periods of time. Once the battery has reached full charge, the unit reverts to 'float' mode to keep battery ready for use.

3. SPECIFICATION

Model no	AUTOCHARGE200HF
Output	6V / 12V
Charging voltage	7.2V± 0.2 / 14.4V±0.2
Charging current	MAX 2.0A
IP rating	
Max. input power	
AC Input voltage	

4. OPERATION

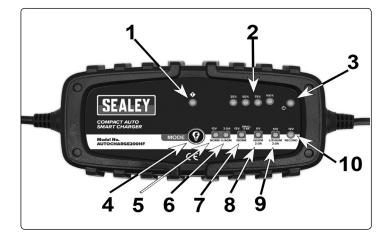


Item	Function
1	Fault indicator light
2	Battery capacity indicator
3	Power indicator light
4	Mode selection button
5	12V Normal mode indicator
6	12V Winter mode indicator
7	12V Maintain mode indicator
8	6V Normal Mode indicator
9	12V Lithium Battery indicator
10	12V Recond mode indicator

4.1. Mode Description.

Mode indicator light	Charging status	Applicable battery capacity
6V NORM	6V normal mode	1.3 - 60Ah
12V NORM	12V normal mode	1.3 - 60Ah
AGM/GEL	12V WINTER MODE	1.3 - 60Ah
12V SMALL 0.8A	12V MAINTAIN MODE	1.3 - 60Ah
12V LITHIUM IRON 12V Lithium battery mode 1.3 - 60Ah (LPF)		1.3 - 60Ah (LPF)
12V RECOND	12V RECOVER MODE	

4.2. 9 STAGE CHARGING.

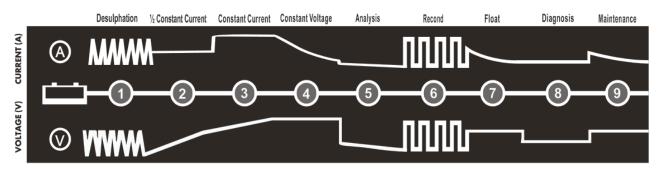

- Stage 1: Desulphation: Pulses of current and voltage.
- Stage 2: Battery charge to 25% capacity using 50% constant current.
- Stage 3: Battery charge to 50% capacity using max. current.
- Stage 4: Battery charge to 75% capacity using constant voltage.
- Stage 5: Analysis: Analysing power capacity.
- Stage 6: Recond: If power capacity is low use Recond to attempt recovery.
- Stage 7: Battery charge to 100% capacity using constant voltage.
- Stage 8: Diagnosis: Check battery for 100% charged.
- Stage 9: Maintenance: Battery fully charged.

4.3. CONNECTING TO THE BATTERY.

NOTE: the charger should be connected to the mains supply before connecting to battery.

- 4.3.1. The output cable from the charger terminates in a polarity conscious socket into which the two alternative leads can be connected.
- 4.3.2. One lead set has two colour coded battery clamps which can be quickly attached to and detached from the battery posts. The second lead is for semi permanent connection to the battery via eyelets.

4.4. CHARGING A NEGATIVE EARTHED BATTERY.

- 4.4.1. Ensure that the black clamp on the clamp lead is not touching the battery or the fuel line.
- 4.4.2. Connect the positive (+) red clamp to the positive (+) battery post and connect the negative (-) black clamp to the negative (-) battery post or vehicle chassis.

4.5. CHARGING A POSITIVE EARTHED BATTERY.

- 4.5.1. Ensure that the red clamp on the clamp lead is not touching the battery or the fuel line.
- 4.5.2. Connect the negative (-) black clamp to the negative (-) battery post and connect the positive (+) red clamp to the positive (+) battery post or vehicle chassis.

4.6. BATTERY NOT CONNECTED TO A VEHICLE.

- 4.6.1. Connect the (+) red clamp to the positive (+) battery post and connect the (-) black clamp to the negative (-) battery post.
- 4.7. PERMANENT CONNECTION TO VEHICLE USING EYELET LEAD.
- 4.7.1. Connect the eyelet on the red (+) wire to the positive (+) battery terminal and connect the eyelet on the black (-) wire to the negative (-) battery terminal.

4.8. CHARGING MODE SELECTION (SEE CHART SECTION 4.1).

- 4.8.1. Choice of charging mode depends on battery rated voltage and battery type.
- 4.8.2. Immediately the unit is powered on, cycle through charging mode options by depressing the Mode button (fig.1 Item 4). When the required option is highlighted hold the Mode key down for 5 seconds and required charging will begin. Charge level is indicated by the display LED sequence (fig.1 Item 2).
- 4.8.3. When charging is complete disconnect the unit from the mains power supply before disconnecting from the battery.

5. TROUBLESHOOTING

Symptom	Solution
No reaction when powered on.	Check mains connection and power supply. Return to Sealey stockist.
Power indicator On - no charging occurring. (fig.1 - item 3).	Check clamp connections to battery. Check for broken clamp cables.

Power indicator and fault LEDs lit simultaneously. (fig.1 - items 3 & 1).	Check voltage selection for correct battery type (6V / 12V). Check polarity of clamps. Over-temperature protection.
Power light off when charging normally.	Defective light.
Mode indicator off when charging normally.	Defective light.
Mode selection button not working.	Mechanical failure of switch. Improper operation of switch. NOTE: Mode can only be changed when battery is not connected.

6. MAINTENANCE

- 6.1. After use and before performing maintenance, unplug and disconnect the battery charger.
- 6.2. Cleaning and user maintenance should be carried out by competent persons.
- 6.3. Use a dry cloth to wipe all battery corrosion and other dirt or oil from the battery connectors, cords, and the charger case.
- 6.4. Ensure that all of the charger components are in place and in good working condition, for example, the plastic boots on the battery clips.
- 6.5. Servicing does not require opening the unit, as there are no serviceable parts.
- 6.6. All other servicing should be performed by qualified service personnel.
- 6.7. If the mains cable is damaged, **DO NOT** use until repaired.
- 6.8. Store the charger unplugged. The cord will still conduct electricity until it is unplugged from the mains.
- 6.9. Store inside, in a cool, dry place.

DO NOT store the connectors clipped together, on or around metal, or clipped to cables. If the charger is moved around the shop or transported to another location, take care to avoid/prevent damage to the cables, connectors and charger. Failure to do so could result in personal injury or property damage.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR 01284 757500 01284 703534 sales@sealey.co.uk www.sealey.co.uk