

Item	Part No	Description	Item	Part No	Description
1	SA2/01	HOUSING (16001)	22	SA2/22	CAM, DRIVE (16022)
2	SA2/02	SLEEVE, VALVE (16002)	23	B/6001	BEARING, 6001
3	SA2/03	VALVE, REVERSE (16003)	24	SA2/24	CYLINDER (16024)
4	SA2/04	TRIGGER (16004)	25	SA2/25	DO NOT USE (ROTOR 16025) USE SA3/25
5	SA2/05	PIN, SPRING (16005)	26	SA2/26	DO NOT USE (ROTOR BLADE) USE SA3/26
6	SA2/06	STEM, VALVE (16006)	27	SA2/27	PLATE, FRONT END (16027)
7	SA2/07	BUSHING (16007)	28	SA2/28	PIN, SPRING (16028)
8	SA2/08	BALL, STEEL (16008)	29	SA2/29	PLATE, REAR END (16029)
9	SA2/09	SPRING (16009)	30	SA2/30	PIN, SPRING (16030)
10	SA2/10	ADAPTOR, HOSE (16010)	31	SA2/31	SEAL, OIL (16031)
11	SA2/11	REGULATOR, AIR (16011)	32	SA2/32	GASKET, REAR (16032)
12	SA2/12	O-RING (16012)	33	SA2/33	O-RING (16059)
13	SA2/13	SCREW, SET (16013)	34	SA2/34	COVER, REAR (16033)
14	SA2/14	SPRING (16014)	35	SA2/35	SCREW, CAP (16035)
15	SA2/15	BUSHING, ANVIL (16015)	36	SA2/36	PIN (16036)
16	SA2/16	USE SA3S/18 ANVIL COLLAR	37	SA2/37	SPRING (16037)
17	SA2/17	O-RING (16017)	38	SA2/38	SCREW, SET (16038)
18	SA2/18	DO NOT USE (ANVIL 16018) USE SA3/18	39	SA2/39	DEFLECTOR, EXHAUST (16039)
19	SA2/19	CAGE, HAMMER (16019)	40	SA2/40	SCREW, TAPPING (16040)
20	SA2/20	PIN, HAMMER (16020)	41	SA2/41	SCREW, SET (16041)
21	SA2/21	DOG, HAMMER (16021)	42	SA2/42	RUBBER, PROTECTING (16047)
22	SA2/22	CAM, DRIVE (16022)	43	SA2/43	DO NOT USE (RUBBER) USE SA3S/39

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of this equipment. WARRANTY: Guarantee is 12 months from purchase date. proof of which will be required for any claim. INFORMATION: Call us for a copy of our latest catalogue and promotions on 01284 757525 and leave your full name and address including your postcode.



Sole UK Distributor Sealey Group, Bury St. Edmunds, Suffolk.







www.sealey.co.uk