


Parts Information:

TIG/MMA HF AC/DC Inverter Welder 200Amp 230V

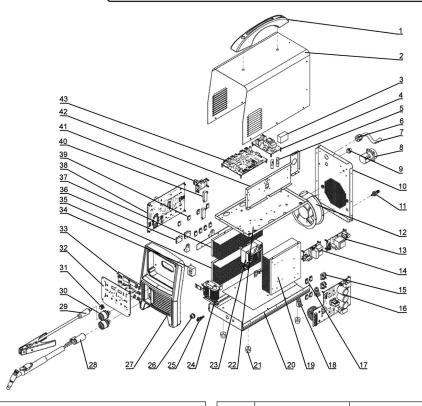



Item	Part No.	Description
1	TIG200HF.01	HANDLE
2	TIG200HF.02	COVER
3	TIG200HF.03	CONTROL MODULE
4	TIG200HF.04	SECONDARY PCB
5	TIG200HF.05	TENSION PLATE
6	PMIG6025S.15	CABLE GLAND
7	TIG200HF.07	POWER LEAD
8	TIG200HF.08	SWITCH
9	TIG200HF.09	CONNECTOR
10	TIG200HF.10	BACK PANEL
11	TIG200HF.11	CONNECTING SCREW ROD
	TIG200HF.11A	COPPER NUT
12	TIG200HF.12	CONTROL FAN
13	TIG200HF.13	SWITCH PCB BOARD
14	TIG200HF.14	PCB BOARD
15	TIG200HF.15	RECTIFIER (SINGLE PHASE)
16	TIG200HF.16	RECTIFIER INVERTER BOARD
17	TIG200HF.17	IGBT KIT
18	TIG200HF.18	FOOT SUPPORT
19	TIG200HF.19	RECTIFIER
20	TIG200HF.20	BOTTOM PANEL
21	TIG200HF.21	FOOT
22	TIG200HF.22	MIDDLE PANEL

Item	Part No.	Description
23	TIG200HF.23	REACTOR
24	TIG200HF.24	CONTROL TRANSFORMER
25	TIG200HF.25	GAS CONNECTOR
26	TIG200HF.26	TORCH CONNECTION
27	TIG200HF.27	FRONT PANEL (PLASTIC)
28	TIG200HF.28	TORCH ASSEMBLY
29	TIG200HF.29	EARTH CABLE
30	TIG200HF.30	QUICK SOCKET (EURO)
31	TIG200HF.31	POTENTIOMETER KNOB
32	TIG200HF.32	SUPPORT PLATE
33	TIG200HF.33	CONTROL PANEL
34	TIG200HF.34	EMC
35	TIG200HF.35	INVERTER (A)
36	TIG200HF.36	QUICK DIODE
37	TIG200HF.37	INVERTER (B)
38	TIG200HF.38	INVERTER PCB BOARD
39	TIG200HF.17	IGBT KIT
40	TIG200HF.40	RESISTANCE WIRE (A)
	TIG200HF.40A	RESISTANCE WIRE (B)
41	TIG200HF.41	GUN SWITCH ISOLATION PLATE
42	TIG200HF.42	PCB PANEL
43	TIG200HF.43	MAIN CONTROL BOARD

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. IMPORTANT: No liability is accepted for incorrect use of product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk