



MOTORCYCLE ROLL-IN WHEEL CLAMP - BOLT DOWN

MODEL NO: **WCR02**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear protective gloves



Wear safety footwear



Wear protective clothing

1. SAFETY

- WARNING! Before use, ensure that there is nothing attached to the motorcycle, that will foul on the clamp.**
- ✓ Maintain the clamp in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate the clamp in a suitable area. Keep area clean and tidy and free from unrelated materials and ensure that there is adequate lighting. Also ensure that the floor/ground is level and strong enough (preferably concrete) to take the weight of the clamp and the motorcycle.
- ✗ **DO NOT** mount the clamp on tarmac/adam, as the surface may be unstable.
- ✓ Ensure that the clamps are free from oil and grease before positioning a motorcycle in the clamp.
- ✓ Keep the clamp clean for the best and safest performance.
- ✓ Maintain correct balance and footing whilst positioning the motorcycle in the clamp.
- ✓ Ensure that the floor is not slippery and wear non-slip shoes.
- ✓ Ensure that the motorcycle is adequately secured to the clamp if to be used for transportation purposes.
- ✓ Keep children and unauthorised persons away from the work area.
- ✗ **DO NOT** use the clamp for a purpose it is not designed to perform.
- ✗ **DO NOT** operate the clamp if it is damaged.
- ✗ **DO NOT** use the clamp when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✗ **DO NOT** allow untrained persons to use the clamp.
- ✗ **DO NOT** make any modifications to the clamp.
- ✓ Before removing a motorcycle from the clamp, ensure that there are no obstructions or persons in the path of the motorcycle.
- WARNING: The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur.**
- ✓ **It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.**

2. INTRODUCTION

Increases the stability of the motorcycle by clamping the bottom and front of the tyre. Features a pivot clamp which locks the front wheel securely by the motorcycle weight. Suitable for fitting on trailers, in vans or to motorcycle lifts (Requires suitable fixings). Fully adjustable to fit wheels Ø15"-21"(380-535mm). Minimum/Maximum tyre width: 50-130mm. Please note: Motorcycle must also be secured using tie-down straps. Fittings not included.

3. SPECIFICATION

Model No.:.....**WCR02**

Applications:


MC365, MC365A, MC401, MC401A, MC454, MC455, MCW360, MT400, MT700

4. ASSEMBLY

- 4.1. Bolt tyre stop in place (fig.1) using supplied fixings.

5. INSTALLATION

- 5.1. Identify the mounting holes in the base.
- 5.2. **PERMANENT INSTALLATION.**
- 5.2.1. Choose the installation site carefully so that there is good access to both insert and extract the motorcycle from the clamp..
- 5.2.2. Ensure that the motorcycle and clamp **DO NOT** become a hazard.
- 5.2.3. Use anchor bolt fixings (not supplied) to secure the chock to a solid concrete surface.
- 5.3. **INSTALLATION FOR TRANSPORTATION.**
- 5.3.1. When used for the transportation of motorcycles, the clamp must be firmly bolted to the floor of the vehicle using suitable fixings.
- 5.3.2. Check the underside of the floor panel before drilling any holes. Make sure that you **DO NOT** strike any important vehicle parts.

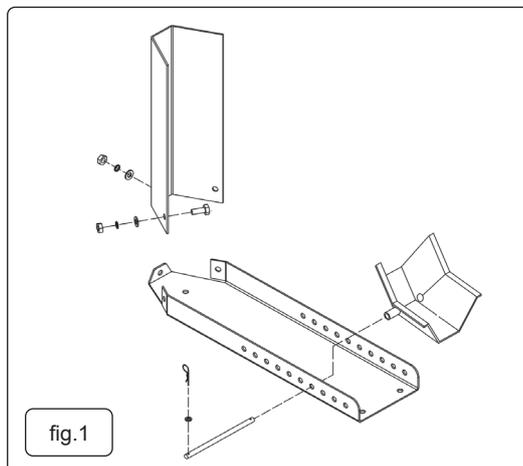

6. OPERATION

6.1. ADJUSTING THE CLAMP (FIG.1)

6.1.1. The pivot clamp has 10 locking positions. To adjust the clamp, extract the 'R' clip and withdraw the pin. Move the pivot clamp to the desired position, insert the pin and retain with the 'R' clip.

6.1.2. To obtain the optimum fit for differing sizes of motorcycle wheel, adjust the position of the pivot clamp and then test as necessary.

6.2. POSITIONING MOTORCYCLE IN THE CLAMP

6.2.1. With the pivot clamp in the open position, align the motorcycle with the clamp.

6.2.2. Push the motorcycle firmly into the clamp so that the tyre runs through the tapered part of the pivot clamp.

6.2.3. As the weight of the wheel passes over the pivot clamp, it will cause the clamp to flip over. The front of the tyre will be supported by the tyre stop and the rear of the tyre by the pivot clamp.

6.2.4. Check that the motorcycle is stable within the clamp before leaving it. If the wheel is loose, or too high in the clamp, extract the motorcycle from the clamp and adjust the positions of the clamp until the optimum fit is achieved.

6.3. REMOVING MOTORCYCLE FROM THE CHOCK.

6.3.1. More effort will be required to remove the motorcycle from the clamp. Ensure that the space into which the motorcycle will move is free from obstructions and people.

6.3.2. Take a firm stance and hold the motorcycle handlebar grips.

6.3.3. Pull back the motorcycle with sufficient force to overcome the hold of the pivot clamp and release the motorcycle from the clamp.

7. MAINTENANCE

7.1. Keep the chock clean and wipe off any oil or grease.

7.2. Before each use check all parts. If any part of the chock is damaged or defective, remove the chock from service and take the necessary action to remedy the problem.

Parts support is available for this product. Please email sales@sealey.co.uk or telephone 01284 757500



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk